


## How Are Manhole Cover Sizes Measured?

The key to measuring for a manhole cover is **NOT** to measure the existing lid itself.

Manhole covers, regardless of who has manufactured them, are sold based on the size of the hole that they are covering.

Also known as the 'clear opening size'.

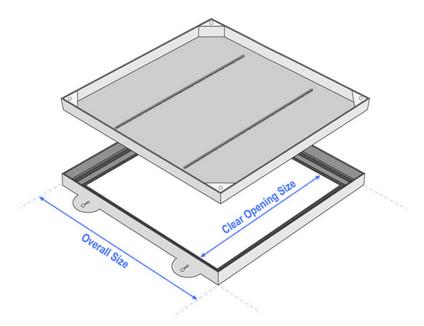

Whether your manhole is square or round, the same principal applies. You should measure the distance between the inside walls of the manhole.

Round Manholes: This will be the internal wall to wall diameter.

Rectangular Manholes: You'll need both the width and the length.

Dimensions should always be taken in millimetres.

Arbour Landscape Solutions Ltd Tel: 020 8953 6177

161. 020 6955 6177

www.arbourlandscapesolutions.co.uk

Email: enquiries@arbourlandscapesolutions.co.uk

Unit 3a, Chassis Industrial Estate, Grovebury Road, Leighton Buzzard, Bedfordshire LU7 4SL